


How to activate the license for a network version?


Hardware key activation procedure on server machine


- 1) Plug your ZSoil hardware key to the USB port
- 2) Install the ZSoil v2013 from the pen drive delivered by ZACE Ltd

Choose **Network version** during a software installation

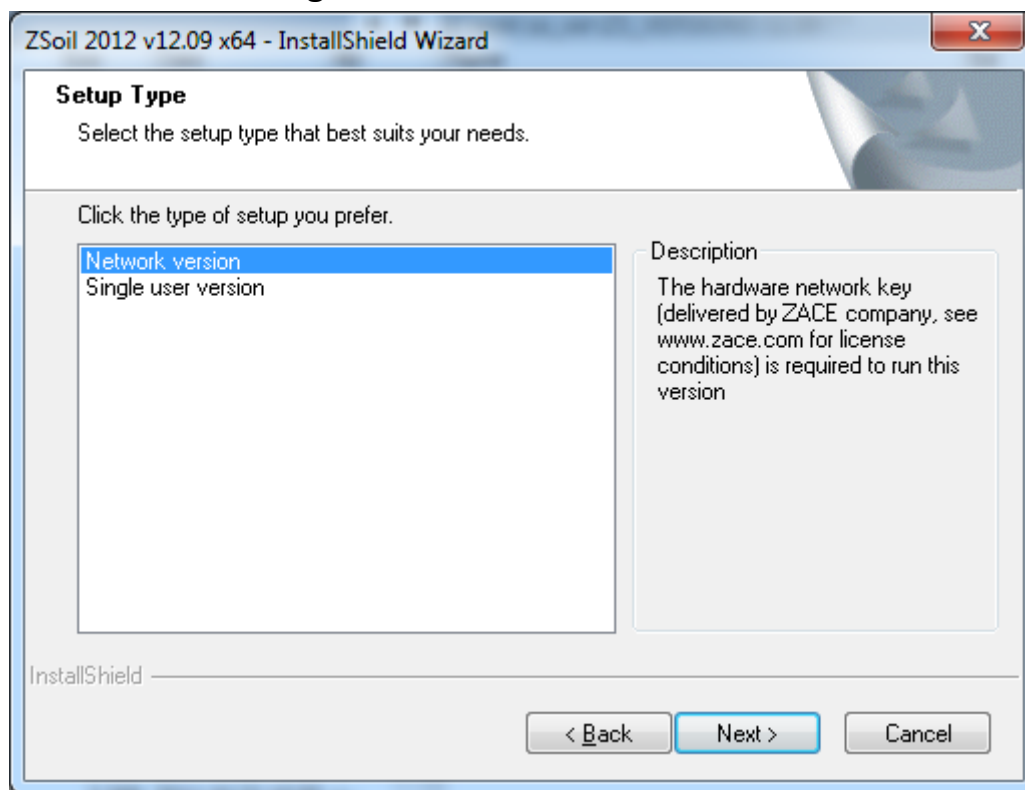


- 3) Run the ZSoil Network Protection Monitor
(Start\All Programs\ZSoil 2013\Tools\ ZSoil Network Protection Monitor)
- 4) On the first run, the user be informed that an authorization of the protection key is required:

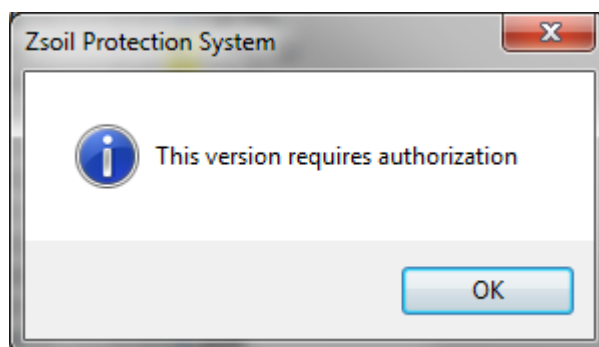

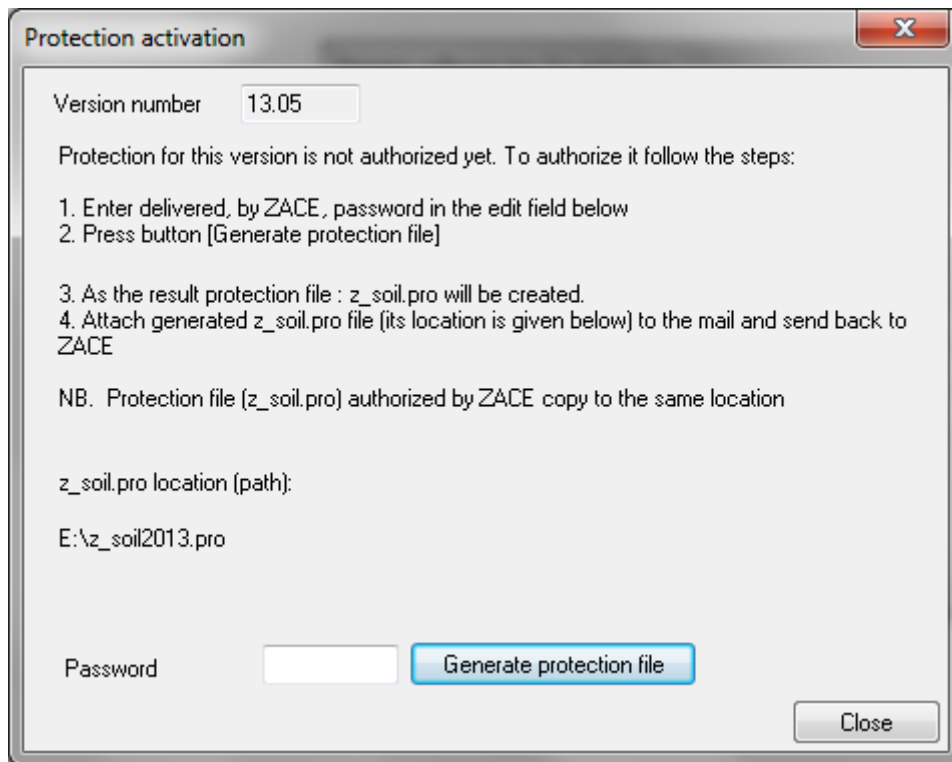

5) Enter the password and press the button “Generate protection file”

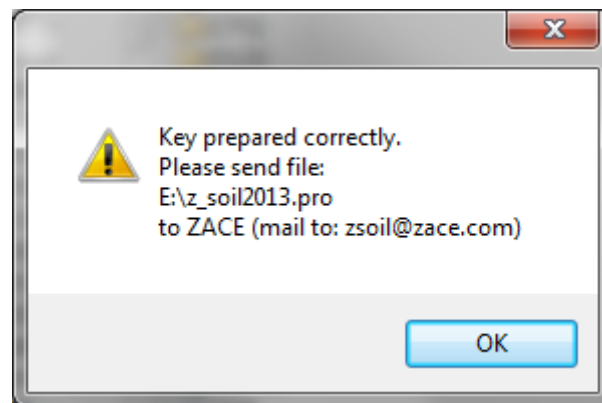


- 6) Attach the generated *z_soil2013.pro* from a USB key to an email and send it to ZACE Ltd. (zsoil@zace.com)
- 7) On return, the user will be provided with the activated protection key (*z_soil2013.pro* file) which should be copied to the USB key

Activation procedure on a node computer


1) Install ZSoil v2013

Choose **Single user version** during software installation

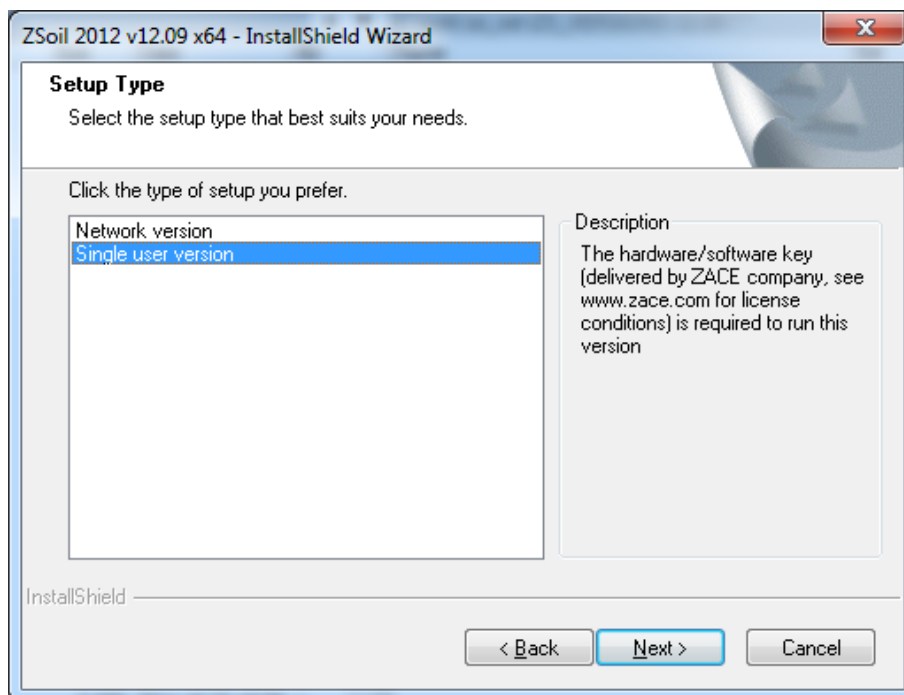

2) Run the ZSoil Protection Manager

(Start\All Programs\ZSoil 2013\Tools\ ZSoil Protection Manager)

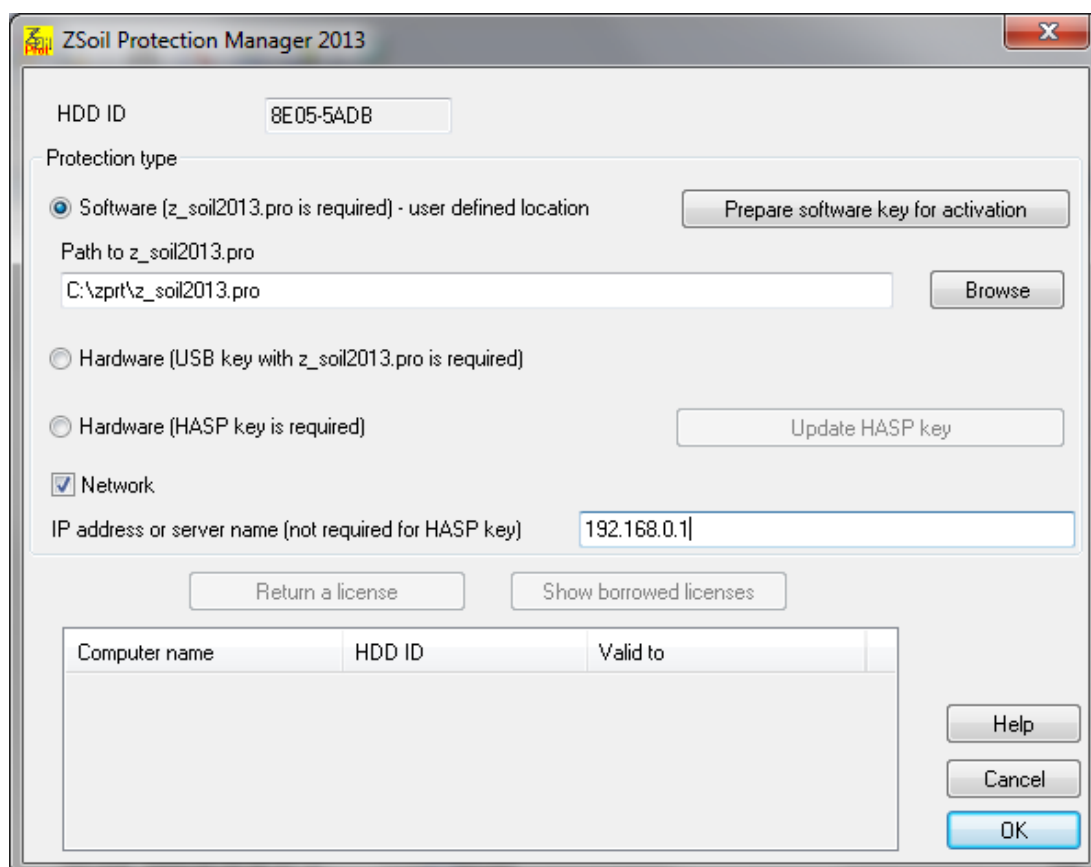

3) Choose the **Network** protection type and enter a **IP address or server name**

4) **ZSoil Network Protection Monitor must be running in order to run ZSoil software on a node computer**